



## Speed-Mat Production stops/spacers Instructions


1) Remove the original carriage stops and install the production stop/spacers.

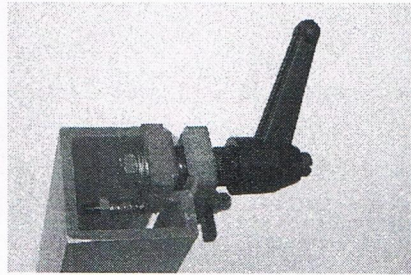

2) Lock each spacer tight, then lift and rotate the adjustable handle to operate in the proper quadrant.

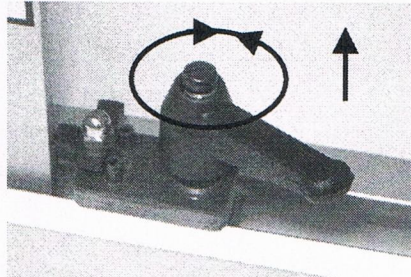

3) Lift the spacer block slightly and rotate 1/4 turn until it snaps down into place. Four spacings are available.

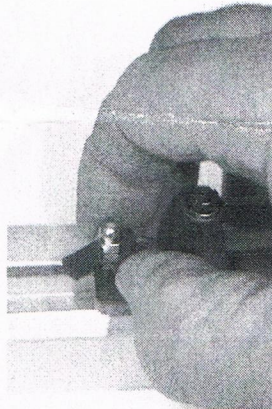

0 mm  
3 mm  
6 mm  
9 mm

6 mm

